


Commercial Grade Digitally Printed Wallpaper – Application Guide




Prepare the surface of the wall thoroughly, so that it is clean, smooth, dry and free of mildew, grease and stains. Mark each wallpaper panel on the wall with a pencil line.

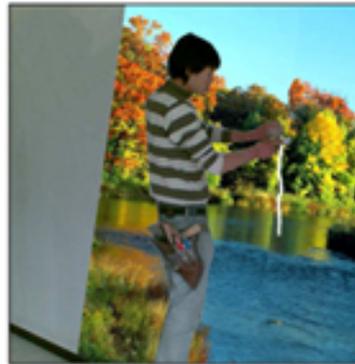

Trim your first panel at the edge that won't be meeting another panel (normally the first left edge). Fit your first panel, overlap your second panel so that the print aligns, using a straight edge and a very sharp craft knife, cut through the two overlapped panels, carefully peel back and remove the offcut, this will leave you with perfectly matched panels. Carefully smooth flat and apply further adhesive if necessary.



Your wallpaper should be mounted using the wall adhesion technique with commercial paste for heavier weight wallpapers.

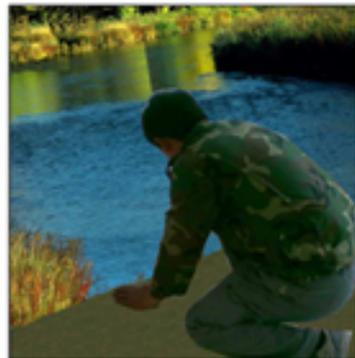

Carefully cut away any remaining wallpaper at ceiling and/or floor levels. Note: this is a commercial grade product and will require a very sharp knife.



Check all corners, edges and joining parts. Due to the heavy weight and the PVC base this product is easily removed prior to re-decoration.

